



Fassi cranes manual

by WSI Models


WSI MODELS

HIGH QUALITY DIECAST SCALE MODELS

- ! Before the scale model will be used, read the manual properly.
- ! This product is very fragile, so use with care and with the right purpose.


Extending the outriggers

Unlock the front outrigger by removing the pin (as seen in fig.1).

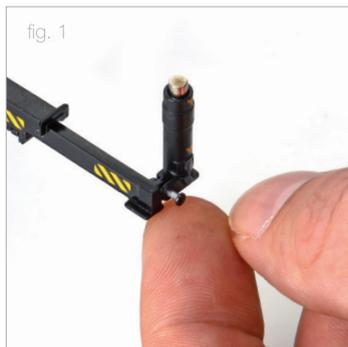



Placing the outrigger pads

Turn the cylinder to ground level, and position the outrigger pads underneath the cylinders.

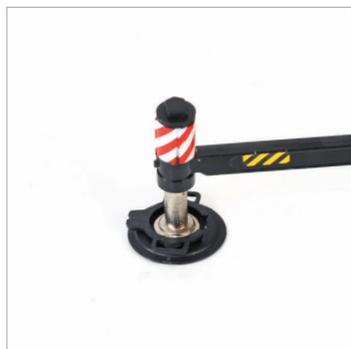


Extending the crane

Position the crane upward and extend the boom sections. Make sure to handle with care.

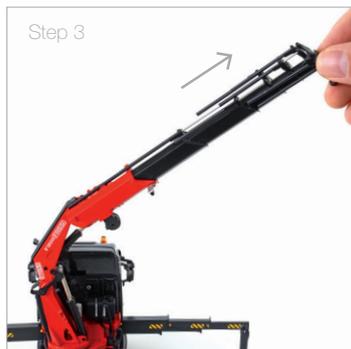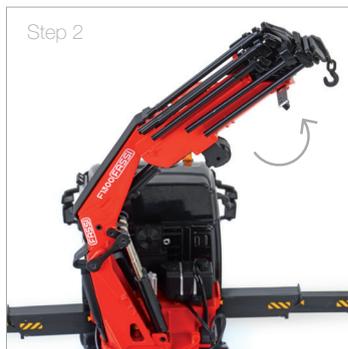

FASSI

wsi-models.com

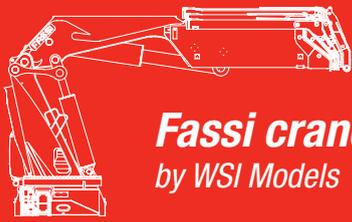

Fassi cranes manual

by WSI Models

WSI MODELS



HIGH QUALITY DIECAST SCALE MODELS

- ! Before the scale model will be used, read the manual properly.
- ! This product is very fragile, so use with care and with the right purpose.

Mounting the jib (if included)

Twist the piston to unlock it.

Remove the top of the crane
and replace it with the jib.

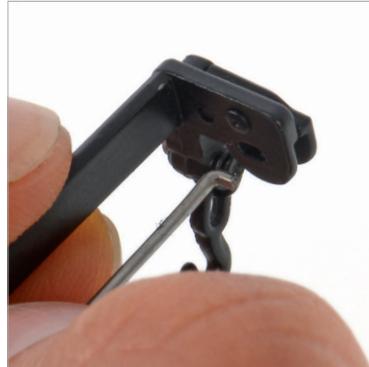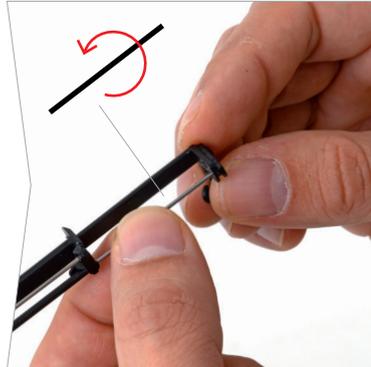

Mounting the Ballast box

Click the kingpin on the bottom
of the box into the fifth wheel,
and slide forward.



FASSI

wsi-models.com