




HIGH QUALITY DIECAST SCALE MODELS

MANUAL

Custom Made Tooling: Potatoes
12-2002

Overview

In this short manual we will show you how to place the following parts into a trailer.

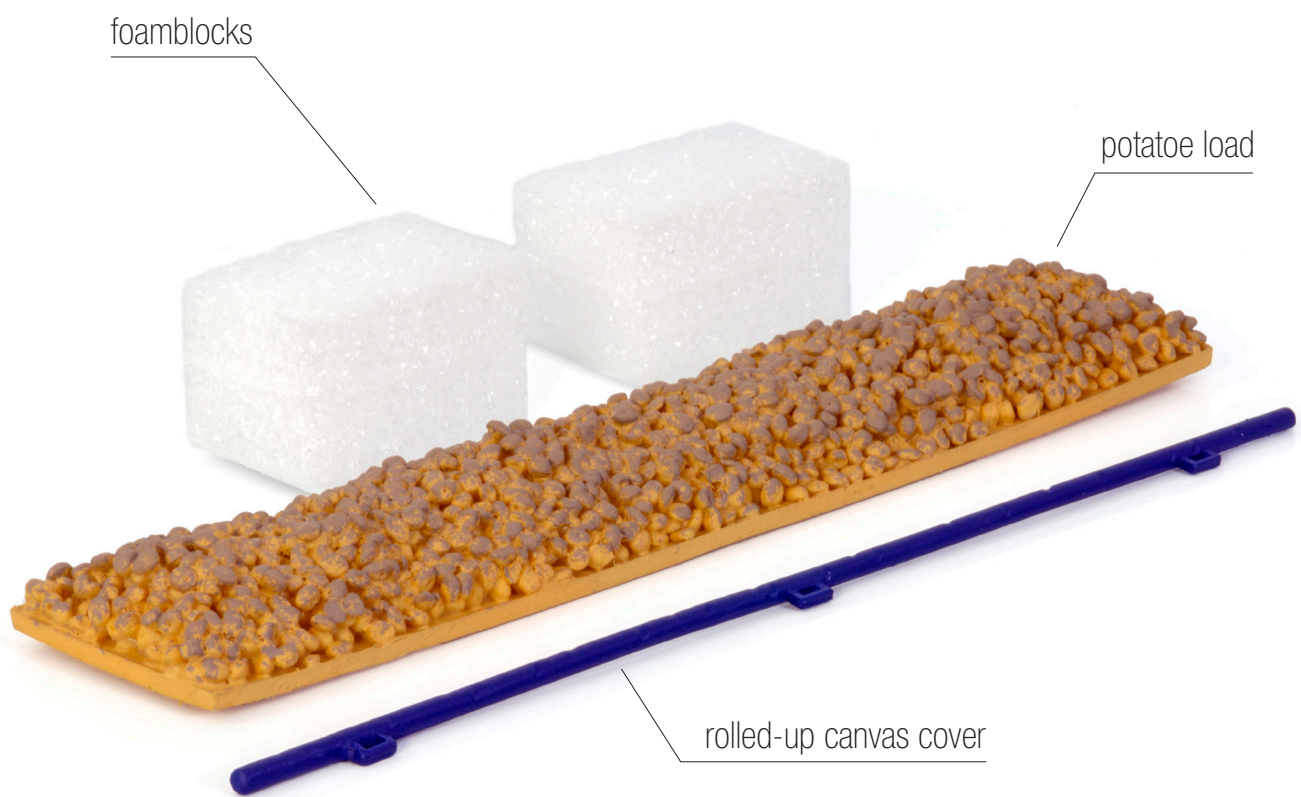


Attach Custom Made Tooling Potatoes to trailer



Step 1

Remove the canvas cover from the trailer.

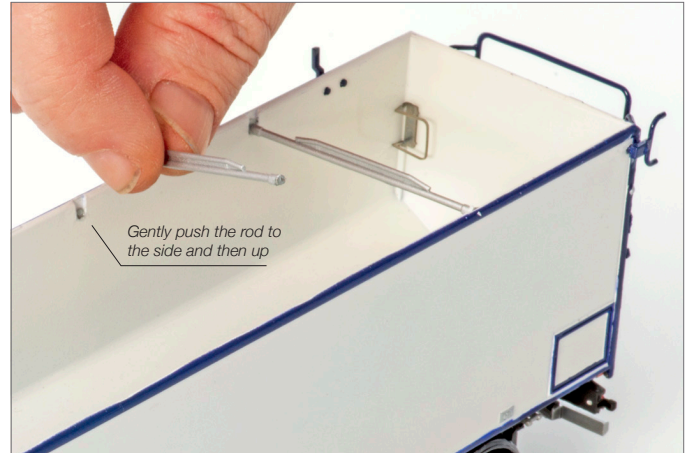

Step 2

Take out the rods.



Step 3

Remove the potato catcher.



Step 4

Attach rolled-up canvas cover on the side hooks.



Step 5

Place the foam. One in the back and one in the front.



Step 6

Put the potatoes on top of the foam on the trailer.

WSI Models

Gelderlandhaven 5
3433 PG Nieuwegein
The Netherlands
+31 (0) 33-286 7905
info@wsi-models.com