




HIGH QUALITY DIECAST SCALE MODELS

**MANUAL**

**Custom Made Tooling: Potatoes**  
**12-2002**

# Overview

In this short manual we will show you how to place the following parts onto a trailer.

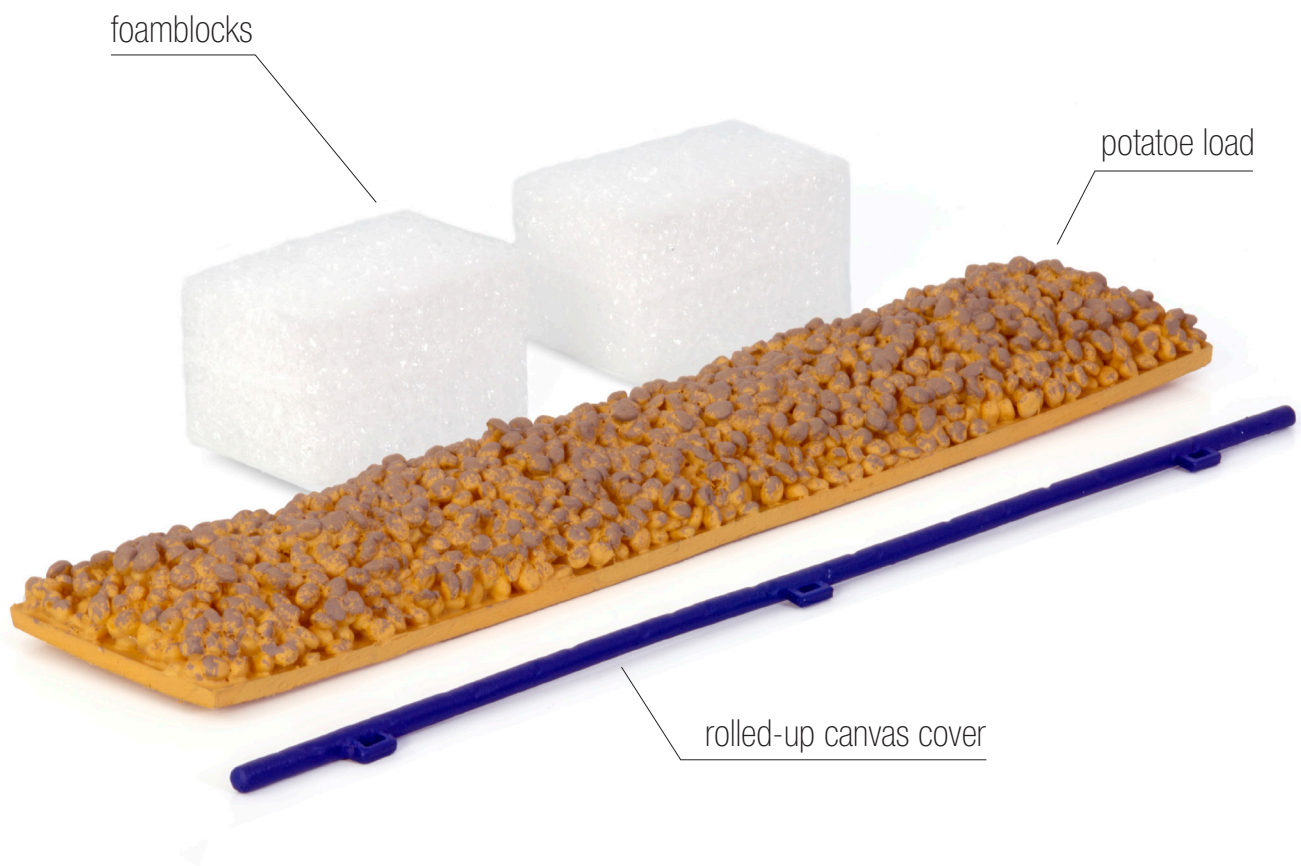


# Attach Custom Made Tooling Potatoes to trailer



## Step 1

Remove the canvas cover from the trailer.

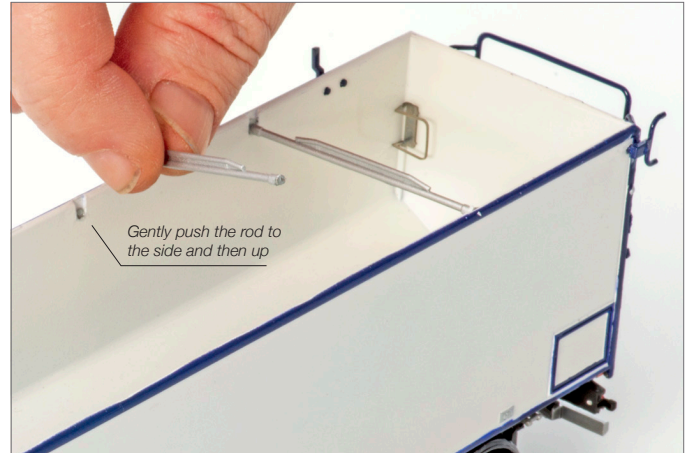

## Step 2

Take out the rods.



## Step 3

Remove the potato catcher.



## Step 4

Attach rolled-up canvas cover on the side hooks.



## Step 5

Place the foam. One in the back and one in the front.



## Step 6

Put the potatoes on top of the foam on the trailer.

## **WSI Models**

Gelderlandhaven 5  
3433 PG Nieuwegein  
The Netherlands  
+31 (0) 33-286 7905  
[info@wsi-models.com](mailto:info@wsi-models.com)